HAVERLAND®

WOW

heatershop
HEATING YOUR HOME FOR LESS

www.heatershop.co.uk
01473 276686

www.haverland.com

ENGLISH

INSTRUCTION MANUAL

WOW

Ultra-quiet Fan Heater

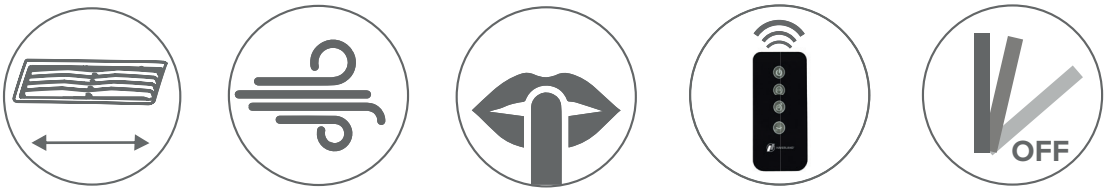

TECHNICAL CHARACTERISTICS

MODEL:	WOW
VOLTAJE:	230 V ~
POWER:	Maximum 1500W
FREQUENCY:	50 Hz
MEASURES (cm:	25.4 X 25.4 X 27.3
WEIGHT (kg):	3

IMPORTANT WARNINGS

Dear customer:
Those devices are extremely quiet and safe. They do not need a specific treatment.
Before its first use, please read carefully these instructions and keep them for future reference.

GENERAL SAFETY INSTRUCTIONS

1. **Please read these instructions carefully.**
2. **If you do not follow theses instructions, the guarantee will expire.**
3. Before connecting this device, please make sure that the main voltage is 230 V and corresponds to the voltage indicated on the nameplate of the device
4. The use of this appliance is prohibited in rooms where flammable gases or products (adhesives, glues, etc.) are present.
5. **WARNING: In order to avoid overheating, do not cover hater**
6. **WARNING:If the mains power cable is damaged, it must be replaced by the manufacturer, with their after-sales service or similar qualified persons, in order to prevent any danger.**
7. If the power cable is damage, it must be replaced by the manufacturer, its after-sell service or similar qualified persons in order to avoid any damage.
8. The device must be regularly checked. Do not switch on the device if it is damaged.
9. **CAUTION:** Parts of this product may reach very high temperatures and cause burns. Pay special attention if children or vulnerable persons are presented.
10. Do not place the appliance directly under an electrical outlet
11. This unit not designed to be handle by persons (including children) with physical, sensorial or mental handicaps, with little experience or knowledge unless they are under the supervision of adult responsible for their safety with the instructions on it's use. Children shall always be supervised to ensure they do not play with the unit.
12. Children between three and eight shall only switch the unit off or on providing it is positioned or installed in it's final operating location and be supervised or havereceived instructions on how to use the unit in a safe manner and understand the risks involved.
13. This unit may be used by children older than eight and by persons with physical, sensorial or mental handicaps, with little experience or knowledge, provived they hace been duly trained and are supervised by an adult that understandsthe risk involved.

14. Cleaning and maintenance shall be performed by adults not children. Children must not play with the unit.
15. For added safety, this appliance is equipped with a device that stops operation in the event of overheating or tipping.
16. Do not use any accessory not recommended by the manufacturer, it could be a risk for the user and make a damage in the appliance.
17. The packaging (plastic bags, cardboard, polyethylene) could lead to potential dangerous situation for children, so keep it out for them.
18. This appliance should be used only for private use and for the tasks for which it was designed. It has not designed for profesional use. **In any case, it not be used outdoor, in greenhouse or for the breeding or rearing animals.** Keep away from heat, direct sunlight, moisture (never immerse it in water) and sharp objects. Do not use the device with wet hands. In case of moisture or water in the appliance, immediately cut off the power supply and do not touch the wetted parts.
19. Do not attempt to repair the device yourself. Contact a qualified technician.
20. To disconnect the heater from the mains, pull the plug, never the cable.
21. Observe the “APPLIANCE SPECIFIC SAFETY INSTRUCTIONS” listed below.

APPLIANCE SPECIFIC SAFETY INSTRUCTIONS

- The appliance must remain in a vertical position.
- The appliance must operate in flat, dry, clean and stable surface.
- Do not hang any object in front or over the device.
- Always make sure that the air inlet and outlet openings are not obstructed.
- Always make sure that any flammable material such as curtains or towels (note wind blows) can not come in contact with the device.
- To clean the appliance, refer to the instructions in the “MAINTENANCE” section, as the penetration of water through the air grilles could be fatal for the appliance.
- Do not insert any objects through the grille or into the appliance.
- This appliance is designed to be connected to the electrical system by means of a plug. Follow the instructions in the “INSTALLATION” section.
- **The warranty does not apply if these instructions are not followed.**

MAIN FEATURES AND CONTROL PANEL

1 Control Panel
2 Outlet
3 Swing Base
4 Fan Motor
5 Power Switch

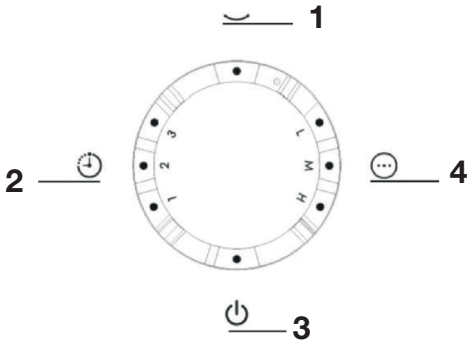

CONTROL PANEL

1 Swing Button
2 Timer Button
3 Power Button
4 Mode Button

POWER SWITCH: Turns the power to on **(I)** or off **(O)** (switch is located on the back of the unit).

LED INDICATOR: Display the condition of power on off and the other settings.

CONTROL PANEL: The control panel contains the operating controls for the heater. All controls buttons are touch-switch.

POWER BUTTON: The POWER Buttons switches the unit between on and standby. Press the ⏻ Button, the unit will be on. The heating eements will be ready for operating.

MODE BUTTON: ⋯ button, press it to change the different working mode, H, M, L.

TIMER BUTTON: Press the ◷ BUTTON to set the turn off time 1-6 hours.

SWING BUTTON: Press the ◡ BUTTON to set the rotation function.

USING THE REMOTE CONTROL

1. The buttons on the remote control function in the same manner as the button on the control panel.
2. The remote control is powered by a CR2025 battery.

OPERATION

- Place the device on a flat level surface and ensure that the air intake and air outlet are clear of obstruction.
- Insert the plug into a 230 V-50Hz power outlet
- Move the ON/OFF SWITCH at the rear of the unit to the on **(I)** position.
- Press the ⏻ button on the control panel to turn the heater on.
- Adjust the working mode by pressing ⋯ button

  WOW has 3 working modes:
  - L mode (1100 W). Pilot L will remain lit in red.
  - M mode (1200 W). Pilot M will remain lit in red.
  - H mode (1500 W). Pilot H will remain lit in red.
- Press ◡ button to turn on/off oscillation.
- Press ◷ button to set up the timer hours as below:
  - 1 press,1hour, lamp 1on
  - 2 presses, 2 hours, lamp 2 on
  - 3 presses, 3 hours, lamp 3 on
  - 4 presses, 4 hours, lamp 1 and lamp 3 on
  - 5 presses, 5 hours, lamp 2 and lamp 3 on
  - 6 presses, 6 hours, lamp1, 2 and lamp 3 on.
- Move the ON/OFF SWITCH at the rear of the unit to the off position **(O)**. Turn the power off and disconnect the plug from the power outlet when not in use.

CLEANING AND MAINTENANCE

- If you do not use the device for a long time, clean it and put it in a box. Store in a dry, ventilated place.
- To clean the appliance, wait until it is completely cold and disconnect it from the mains socket.
- Use a damp cloth to clean the unit. Never clean it by splashing it with water or inserting it into the appliance.
- Never clean the appliance with acids, gasoline, benzene, etc.
- Before using the appliance again, check it and make sure that nothing obstructs the air inlets and outlets.

HAVERLAND®

Marsan Industrial S.A.
Av. San Martín de Valdeiglesias, 2
28922 Alcorcón, Madrid
Tel: 916427020
Fax: 916191950
Email: info@haverland.com

HAVERLAND UK Limited
Challenge House
Sherwood Drive
Bletchley
MK3 6dp
Tel: 0330 3651940
Fax: 01672 811944
Email: haverland@haverland.co.uk

www.haverland.com
www.haverland.co.uk

www.heatershop.co.uk
01473 276686